

TABLE OF CONTENTS

COPYRIGHT INFORMATION

TABLE OF CONTENTS

HOW TO USE THIS MANUAL

Overview	xiii
Tutorials	xiii
Conventions Used	xiii
Symbols	xv
Common Terms Used	xvi

INTRODUCTION

Description of Product	1-1
Motor Testing Philosophy	1-1
MCE.....	1-1
EMAX	1-2
Electrical Safety Precautions	1-3
Warning	1-3
MCE.....	1-4
EMAX	1-5
Technical Support	1-6
Returning the Tester to PdMA	1-6
Warranty	1-7

HARDWARE

Shipping Case	2-1
Tester	2-2
Case.....	2-2
Components	2-4
Tester Battery.....	2-6
Laptop Computer	2-7
General	2-7
Laptop Battery	2-8
Computer Ports.....	2-8
Tester Care and Handling.....	2-8
Tester Environmental Conditions	2-9
Storage	2-9
Shipping.....	2-9
Accessory Bag	2-9
Accessories	2-9
MCE Test Leads	2-10
DC Commutator Bar-to-Bar Test Leads.....	2-11
Emax Test Leads.....	2-12
Specifications.....	2-14
MCE	2-14
EMAX	2-15
Hardware	2-16

MCEGOLD

Introduction.....	3-1
Tutorials	3-1
Starting MCEGold	3-1

MCEGold Home Screen	3-1
Title Bar	3-2
Menu	3-2
Toolbar	3-17
Status Bar Icon	3-18
Site Navigator Window	3-18
Asset Summary	3-21
Nameplate	3-22
Identification Tab	3-22
Manufacturer Tab	3-22
Nameplate 1 Tab	3-23
Nameplate 2 Tab	3-24
Bearing Tab	3-24
Resistor Bank Tab	3-25
Brush Assembly Tab	3-26
Armature Tab	3-26
Add Asset	3-27
Site Condition	3-27
Test History	3-28
Test History Menu	3-29
Warning Settings	3-31
Test Selection	3-32
Search	3-32
Simple Search	3-32
Advanced Search	3-33
Search Criteria	3-34
Search Buttons	3-35
WatchList	3-36
WatchList Menu	3-36
Create a WatchList	3-37
Add Asset to WatchList	3-38
Remove WatchList	3-38
Remove Asset From WatchList	3-38
Asset List Section	3-39
MCE Auto	3-40
MCE Auto Test	3-40
EMAX Auto	3-40
EMAX Auto Test	3-40
Fault Zones	3-40
Message Center	3-41
Message Center Menu	3-42
View Notes	3-42
Compose	3-43
Asset Diagnostic	3-44
Asset Condition	3-44
Asset Warning Levels	3-44
Trash	3-44
Export File	3-44
Report	3-45
AC Emax Summary	3-46
Asset Condition Code	3-47
Asset Inventory	3-48
MCE Summary	3-49
Message History	3-50
PI/DA Summary	3-51

Detailed Report.....	3-52
Exiting MCEGold	3-59
Shuttle Parking	3-60
MCEGOLD NETWORK	
Utility Program	4-2
License Key	4-3
Database.....	4-4
Desktop Database Utility.....	4-4
Network Tester Database Utility.....	4-5
Server (Desktop Only).....	4-5
Calibration (Tester Only).....	4-6
MCEGold Account Manager.....	4-6
Account Manager Menu Items	4-7
Account Manager Tool Bar Icons.....	4-7
Account Manager Window.....	4-8
Create a Site.....	4-9
Create New Group	4-10
Add Accounts to Group.....	4-11
Create a New Account.....	4-12
Assigning Group Assignments and Account Rights	4-13
Editing Account, Group, and Site.....	4-14
Edit Account	4-14
Remove Account	4-16
Edit Group	4-17
Remove Group.....	4-17
Edit Site	4-18
Field Tester, Local and Network	4-18
DataSync.....	4-19
DownSync	4-19
UpSync	4-22
Two Way Sync	4-23
Clear Local Database.....	4-23
Field Tester Local.....	4-24
Deleted and New Assets Folders.....	4-26
Deleted Assets Folder.....	4-26
New Assets Folder.....	4-27
Tutorials.....	4-27
MCE	
Testing Quick Start	5-1
Introduction.....	5-2
Test Selection Window	5-3
Test List.....	5-4
Asset Information	5-5
MCE Test Setup.....	5-5
Asset Test Location	5-5
Test Frequency	5-6
Resistance-to-Ground.....	5-6
Voltage	5-6
Asset Temperature.....	5-6
Span	5-6
Charge Time	5-6
Test Button	5-6
Save Button.....	5-6
Reset Button	5-6

Cancel Button	5-6
Test Window	5-7
AC Induction Assets	5-7
MCE Auto Test.....	5-7
Fault Zone Report.....	5-10
AC Standard Test	5-12
Polarization Index.....	5-16
RIC	5-20
Step Voltage	5-24
Step-by-Step Step Voltage Testing	5-26
AC Synchronous Assets	5-29
Stator Section Test.....	5-29
Field Section Tests	5-30
AC Wound Rotor Assets	5-34
Stator Section Tests	5-35
Rotor Section Tests.....	5-35
Resistor Bank Section Tests	5-35
DC Assets	5-40
Armature Section Tests	5-40
Field Section Tests	5-52
Test Data Analysis Information	5-53
Standard Test	5-53
Resistance-to-Ground	5-53
Capacitance-to-Ground.....	5-57
Phase-To-Phase Resistance	5-59
Phase-to-Phase Inductance	5-61
Test Lead Check	5-63
Resistive Imbalance.....	5-63
Inductive Imbalance	5-63
Average Inductance	5-63
Polarization Index Test.....	5-64
What Does it Tell You?.....	5-64
Why Is This Important?.....	5-65
Setting Warning Levels	5-65
Data Interpretation.....	5-65
Examples	5-66
Rotor Influence Check (RIC).....	5-67
Why Is This Important?.....	5-68
Rotor Position And Aliasing	5-68
Data Interpretation.....	5-69
DC Bar-to-Bar Test.....	5-74
What Does It Tell You?.....	5-74
Why Is This Important?.....	5-74
Data Interpretation.....	5-74
MCE Analysis	5-74
AC Induction Assets	5-74
Rotor Influence Check (RIC)	5-74
Standard Test	5-75
Polarization Index/Dielectric Absorption.....	5-75
AC Synchronous Assets	5-75
Stator.....	5-75
Field Circuit.....	5-76
AC Wound Rotor Assets	5-77
Stator.....	5-77
Rotor	5-77

Resistor Bank.....	5-78
DC Assets	5-79
Armature Circuit.....	5-79
Field Circuit.....	5-79
EMAX CURRENT ANALYSIS	
Testing Quick Start	6-1
View Data	6-1
Introduction.....	6-2
Getting Started	6-2
Test Selection Window	6-3
Test List	6-4
Asset Information	6-5
Test Setup	6-5
AC Assets	6-5
DC Asset.....	6-10
Set-up Options	6-13
Asset Test Location	6-13
Probe Settings.....	6-14
Carrier Frequency/Line Frequency.....	6-14
Current Transformer Scale	6-14
Potential Transformer Scale	6-14
Phase Configuration	6-15
Phase Angle	6-15
Missing Currents	6-15
Phase Sequence	6-15
Trigger Type (In-Rush/Start-Up only)	6-15
Pre-Trigger Length (In-Rush/Start-Up only).....	6-15
Trigger Factor (In-Rush/Start-Up only)	6-15
Channel (In-Rush/Start-Up only)	6-16
Capture Length (In-Rush/Start-Up only).....	6-16
Starts With	6-16
Test Button	6-17
Save Button	6-17
Reset Button	6-17
Cancel Button	6-17
Test Window	6-17
AC Induction Assets.....	6-18
EMAX Auto	6-18
Rotor Evaluation.....	6-20
Eccentricity.....	6-23
In-Rush/Start-Up	6-25
Demod	6-28
AC Synchronous.....	6-31
EMAXAuto	6-31
Rotor Evaluation.....	6-31
Eccentricity.....	6-31
In-Rush/Start-Up	6-31
Demod	6-31
AC Wound Rotor.....	6-32
EMAX Auto	6-32
Rotor Evaluation.....	6-32
Eccentricity.....	6-32
In-Rush/Start-Up	6-32
Demod	6-32

DC Asset.....	6-32
Armature Section Tests	6-32
Field Section Tests	6-45
Analysis	6-49
EMAX Auto	6-49
Rotor Evaluation.....	6-49
File Menu.....	6-49
Edit	6-50
View	6-50
Options	6-51
Related Windows.....	6-52
Display Options.....	6-52
Review Spectrum.....	6-53
Review Time Domain.....	6-55
Review Test History.....	6-57
Eccentricity.....	6-58
Review Spectrum.....	6-59
Review Time Domain.....	6-60
Review Test History.....	6-61
In-Rush/Start-Up.....	6-63
File Menu.....	6-63
Edit Menu	6-64
Options	6-64
Display Options.....	6-65
Review Spectrum.....	6-66
Review Test History.....	6-67
Demod.....	6-68
File Menu.....	6-69
Edit	6-70
View	6-70
Options	6-70
Related Windows.....	6-71
Display Options.....	6-71
Review Spectrum.....	6-73
Review Test History.....	6-73
Analysis.....	6-75
DC Assets	6-75
Armature Section.....	6-76
Review Spectrum.....	6-80
Review Time Domain.....	6-80
Field Section.....	6-89
Warning Settings.....	6-89
Change Warning Settings	6-91

EMAX POWER ANALYSIS

Testing Quick Start	7-1
View Data	7-1
Introduction.....	7-2
Getting Started	7-2
Test Selection Window	7-3
Test List	7-4
Asset Information	7-4
Test Setup	7-5
AC Assets	7-5
DC Assets	7-8

Test Window	7-10
AC Induction Assets	7-10
Step-by-Step Power	7-10
AC Synchronous Assets	7-12
AC Wound Rotor Assets	7-12
DC Assets	7-12
Armature Section	7-12
Field Section	7-14
Analysis	7-14
AC Assets	7-14
Power Phasor	7-14
Power Time Domain	7-18
Power Voltage and Current FFT	7-20
Power Voltage and Current Harmonics	7-22
Power Instantaneous	7-23
Power FFT	7-25
Power Harmonics	7-27
Power Results	7-28
Review Test History	7-32
DC Assets	7-34
Power	7-34
Review the Test History	7-37
Warning Settings	7-38
Change Warning Settings	7-39

APPENDIX A - RESOURCES

General Information	A-1
Wound Rotor & Synchronous Motors	A-1
Harmonics	A-1

GLOSSARY

INDEX

