

INDEX

% Current Imbalance, 6-58, 6-63
 % FLA, 6-62
 % Full Load Amps, 6-58, 6-62, 6-74
 % Slip, 6-57

A

About, 3-16
 Absorption Current, 5-64
 AC Assets
 Power Analysis, 7-14
 AC EMAX Summary
 Report, 3-46
 AC Induction, 5-7
 Analysis, 5-74
 Polarization Index, 5-16
 RIC, 5-20
 Step Voltage, 5-24
 Test Window
 Current Analysis, 6-18
 MCE, 5-7
 AC Standard Test, 5-75, 5-77
 AC Induction, 5-12
 AC Standard Test, 5-12, 5-13
 Analysis, 5-75
 Step-By-Step Testing, 5-13
 Wound Rotor, 5-77
 AC Synchronous, 5-29
 Analysis, 5-75, 5-76
 Field Section, 5-30
 Stator Section, 5-29
 Synchronous, 5-30
 Test Window
 Current Analysis, 6-31
 MCE, 5-29
 AC Wound Rotor, 5-34
 Analysis, 5-77
 Recommended Actions, 5-77
 Resistor Bank Section, 5-35
 Resistor Bank Test, 5-36
 Rotor Section, 5-35
 Stator Section, 5-35
 Test Window
 Current Analysis, 6-32
 MCE, 5-34
 Accessory Bag, 2-9
 Account Manager
 Account Rights, 4-13
 Add Accounts to Group, 4-11
 Icon
 Create

 Account, 4-7
 Create Group, 4-7
 Create Site, 4-7
 Show Manager, 4-7
 System Activity, 4-7
 Menu
 Data, 4-7
 Windows, 4-7
 Network, 4-6
 Window, 4-8
 Add
 Asset, 3-17, 3-27
 WatchList, 3-38
 Air Gap, 5-68, 5-71, 5-73, 6-2, 6-58, 6-60
 Current Analysis, 6-2
 Aliasing
 Rotor Influence Check, 5-68
 Data Interpretation, 5-69
 Rotor Position, 5-68
 Analysis, 6-75
 Current Analysis, 6-49
 Demod, 6-68, 6-75
 Eccentricity, 6-58
 In-Rush/Start-Up, 6-63
 Rotor Evaluation
 Time Domain, 6-55
 MCE
 AC Induction Motors, 5-74
 AC Standard Test, 5-75, 5-77
 Wound Rotor, 5-77
 AC Synchronous Motors, 5-75
 AC Synchronous Test, 5-76
 AC Wound Rotor Motors, 5-77
 Average Inductance, 5-63
 Bar-to-Bar, 5-79
 Capacitance-to-Ground, 5-57
 DC Assets, 5-79
 Dielectric Absorption, 5-79
 Polarization Index, 5-79
 DC Bar-to-Bar, 5-74
 DC Standard Test, 5-79
 Dielectric Absorption, 5-75, 5-76, 5-78
 Inductive Imbalance, 5-63
 Phase-to-Phase Inductance, 5-61
 Phase-to-Phase Resistance, 5-59
 Polarization Index, 5-64, 5-75, 5-76, 5-77,
 5-78
 Wound Rotor, 5-78
 Resistance-to-Ground, 5-53
 Resistive Imbalance, 5-63
 Resistor Bank, 5-78

- Rotor Influence Check, 5-74, 5-75, 5-77
 - Test Lead Resistance, 5-63
 - Power Analysis
 - Review
 - Power Time Domain, 7-36
 - Test History, 7-32, 7-37
 - Warning Levels
 - Current Crest Factor, 7-33
 - Current Imbalance, 7-33
 - Current RMS, 7-33
 - Current THD, 7-34, 7-38
 - Differential Current, 7-38
 - Harmonic Factor, 7-33
 - Self Impedance Imbalance, 7-34
 - Voltage Crest Factor, 7-33
 - Voltage Imbalance, 7-33
 - Voltage Line-to-Line, 7-33
 - Voltage THD, 7-38
 - VoltageTHD, 7-33
 - Rotor Evaluation
 - Change Speed, 6-51
 - Correct Displayed Data, 6-51
 - Test History
 - Rotor Evaluation
 - Current Analysis, 6-58
 - Armature Compensation, 5-74
 - Armature Section Tests, 5-40
 - DC Assets
 - MCE, 5-40
 - Armature Tab
 - Nameplate, 3-26
 - Asset
 - Add, 3-8
 - Copy, 3-9
 - Edit, 3-10
 - Move, 3-10
 - Remove, 3-10
 - Asset Condition
 - Message Center, 3-44
 - Asset Condition Code
 - Report, 3-47
 - Asset Diagnostic
 - Message Center, 3-44
 - Asset Information, 5-5
 - Power Analysis
 - Test Selection Window, 7-4
 - Test Selection
 - MCE, 5-5
 - Asset Inventory
 - Report, 3-48
 - Asset Manager, 3-3
 - Asset Summary, 3-17, 3-21
 - Asset Temperature
 - Test Selection
 - MCE, 5-6
 - Asset Test Location, 5-5
 - Power Analysis
 - AC Assets, 7-5
 - DC Assets, 7-8
 - Test Selection
 - MCE, 5-5
 - Asset Warning Levels
 - Message Center, 3-44
 - Average Inductance, 5-63
- B**
- Bar-to-Bar
 - Data Interpretation, 5-74
 - Step-By-Step Testing, 5-49
 - Test, 5-48
 - Test Leads, 2-11
 - Test Procedure
 - DC Motors
 - Armature Circuit, 5-47
 - Baseline, 5-3, 5-54, 5-61
 - Change From, 5-57, 5-60, 5-62
 - Current Analysis, 6-2, 6-66, 6-67, 6-83, 6-84
 - Warning Settings, 6-90
 - From Last Baseline, 3-30
 - Power Analysis
 - Warning Settings, 7-38
 - Set As, 3-30
 - Show Tests, 3-30
 - Undo, 3-30
 - Battery
 - Charger, 2-8
 - Indicator, 2-5
 - Laptop, 2-8
 - Tester, 2-6
 - Care, 2-8
 - Holder, 2-2
 - Bearing Tab
 - Nameplate, 3-24
 - Brush Assembly Tab
 - Nameplate, 3-26
 - Button
 - Cancel, 5-6, 6-17, 7-8, 7-10
 - Reset, 5-6, 6-17, 7-7, 7-10
 - Save, 5-6, 6-17, 7-7, 7-10
 - Test, 5-6, 6-17, 7-7, 7-10
- C**
- Calculating
 - Eccentricity Frequency, 6-60
 - Calibration
 - Returning Tester, 1-6

- Tester, 2-1, 2-9
- Cancel Button
 - Test Selection
 - MCE, 5-6
- Capacitance-to-Ground, 1-1
 - Analysis, 5-57
 - Data Interpretation, 5-58
 - Warning Levels, 5-57
- Capacitors
 - Power Correction, 5-62
 - Power Factor, 5-29, 5-62
 - Power Factor Correction, 5-3, 5-7, 5-35
 - Surge, 5-3, 5-7, 5-29, 5-35, 5-58, 5-62
- Carrier Frequency, 6-74
- Carrier/Line Frequency, 7-6
 - Power Analysis
 - DC Power Test
 - Test Setup, 7-9
- Change Speed
 - Rotor Evaluation, 6-51
- Charge Time
 - Test Selection
 - MCE, 5-6
- Charging Current, 5-64
- Clear Local Database
 - Field Tester, 4-23
- Commutator Bar-to-Bar, 1-2
- Comparison, 5-3
- Compose
 - Message Center, 3-43
- Computer
 - Laptop, 1-6
 - Care, 2-8
 - Ports
 - Parallel, 2-8
 - PCMCIA, 2-8
 - Serial, 2-8
 - Specifications, 2-7
- Connector
 - Current Probe, 2-6
 - MCE Test Lead, 2-6
 - Voltage Probe, 2-6
- Contact
 - PdMA, 1-6
- Copy
 - Test History, 3-29
- Correct Displayed Data
 - Rotor Evaluation, 6-51
- Create
 - Icon
 - Group, 4-7
 - Site, 4-7
 - Message
 - Test History, 3-29
 - New Account, 4-12
 - New Group, 4-10
 - Site, 4-9
 - WatchList, 3-37
- Create Icon
 - Account, 4-7
- Current, 7-31
 - Absorption, 5-64
 - Charging, 5-64
 - Leakage, 5-64
- Current Analysis
 - Air Gap, 6-2
 - Baseline, 6-2
 - DC Current Analysis
 - Display Options, 6-78
 - Menu, 6-76
 - Edit, 6-77
 - Options, 6-77
 - Related Windows, 6-78
 - View, 6-77
 - Review
 - Test History, 6-80
 - Time Domain, 6-80
- DC In-Rush/Start-Up
 - Display Options, 6-82
 - Menu
 - Edit, 6-81
 - File, 6-80
 - Options, 6-81
 - Review
 - Spectrum, 6-83
 - Test History, 6-84
- Demod, 6-68
 - Analysis, 6-75
 - Display Options, 6-71
 - Menu
 - Edit, 6-70
 - File, 6-69
 - Options, 6-70
 - View, 6-70
 - Related Windows Menu, 6-71
 - Review
 - Test History, 6-73
- Drive Input
 - Display Options, 6-88
 - Menu
 - Edit, 6-87
 - File, 6-86
 - Options, 6-87
 - Related Windows, 6-88
 - View, 6-87
- Eccentricity, 6-58
 - Review
 - Spectrum, 6-59
 - Test History, 6-61
 - Time Domain, 6-60

- EMAX Auto, 6-49
 - Icon, 6-3
- Getting Started, 6-2
- In-Rush/Start-Up, 6-2, 6-63
 - Display Options, 6-65
 - Menu
 - Edit, 6-64
 - File, 6-63
 - Options, 6-64
 - Review
 - Spectrum, 6-66
 - Test History, 6-67
- Introduction, 6-2
- Quick Start, 6-1
- Rotor Evaluation, 6-49, 6-57
 - Display Options, 6-52
 - Menu
 - Edit, 6-50
 - File, 6-49
 - Options, 6-51
 - Related Windows, 6-52
 - View, 6-50
 - Review Spectrum, 6-53
 - Test History
 - Analysis, 6-58
 - Test Result Values, 6-57
 - Time Domain, 6-55
- Setup Options
 - Asset Test Location, 6-13
 - Button
 - Cancel, 6-17
 - Reset, 6-17
 - Save, 6-17
 - Test, 6-17
 - Capture Length, 6-16
 - Carrier Frequency, 6-14
 - Channel, 6-16
 - Current Transformer Scale, 6-14
 - Missing Currents, 6-15
 - Phase Angle, 6-15
 - Phase Configuration, 6-15
 - Phase Sequence, 6-15
 - Potential Transformer Scale, 6-14
 - Pre-Trigger Length, 6-15
 - Probe Settings, 6-14
 - Starts With
 - EMAX Auto, 6-16
 - Trigger
 - Factor, 6-15
 - Type, 6-15
- Test Result Values, 6-62, 6-74
- Test Selection Window, 6-3
 - Asset Information, 6-5
 - Test
 - List, 6-4
 - Setup, 6-5
- Test Setup
 - DC Current Analysis, 6-11
 - DC EMAX Auto, 6-10
 - DC In-Rush/Start-Up, 6-12
 - Demod, 6-9
 - Drive Input, 6-13
 - Eccentricity, 6-7
 - EMAX Auto, 6-5
 - In-Rush/Start-Up, 6-8
 - Rotor Evaluation, 6-6
- Test Window, 6-17
 - AC Induction Assets, 6-18
 - Demod, 6-28
 - Eccentricity, 6-23
 - EMAX Auto, 6-18
 - In-Rush/Start-Up, 6-25
 - Rotor Evaluation, 6-20
 - Step-by-Step
 - Demod, 6-28
 - Eccentricity, 6-23
 - EMAX Auto, 6-18
 - In-Rush/Start-Up, 6-25
 - Rotor Evaluation, 6-20
 - AC Synchronous Assets, 6-31
 - Demod, 6-31
 - Eccentricity, 6-31
 - EMAX Auto, 6-31
 - In-Rush/Start-Up, 6-31
 - Rotor Evaluation, 6-31
 - AC Wound Rotor Assets, 6-32
 - Demod, 6-32
 - Eccentricity, 6-32
 - EMAX Auto, 6-32
 - In-Rush/Start-Up, 6-32
 - Rotor Evaluation, 6-32
 - DC Assets, 6-75
 - DC EMAX Auto, 6-32
 - Field Section Tests, 6-45
 - Step-by-Step
 - DC EMAX Auto, 6-32
 - Drive Input, 6-43
 - In-Rush/Start-Up, 6-45
 - Test Window, 6-32
 - DC Current Analysis, 6-76
 - DC EMAX Auto, 6-76
 - DC In-Rush/Start-Up, 6-80, 6-89
 - Drive Input, 6-85
- View Data, 6-1
- Warning Settings, 6-89
 - Change, 6-91
- Current Crest Factor, 7-33
- Current Imbalance, 7-33

- Current Probes, 6-2, 7-2
- Current RMS, 7-33
- Current Spikes, 7-2
- Current THD, 7-34, 7-38
- Current Transformer, 6-74
- Current Transformer Scale, 7-6
 - DC Power Test
 - Test Setup, 7-10
- Customer Service
 - Dell Computer, 1-8
- D**
- DAQ Cable, 2-5
- Data
 - Analysis Assistance, 1-6
 - Export, 3-14, 3-15
 - Import, 3-15
 - Menu, 4-7
- Data Interpretation
 - Bar-to-Bar, 5-74
 - Capacitance-to-Ground, 5-58
 - Phase-to-Phase Inductance, 5-62
 - Phase-to-Phase Resistance, 5-60
 - Polarization Index, 5-65
 - Rotor Influence Check, 5-69
- DataSync
 - Field Tester, 4-19
- DC
 - EMAX Auto
 - Test Window
 - Current Analysis, 6-32
 - Power Analysis
 - PowerTime Domain, 7-34
 - Power Test
 - Test Setup, 7-8
 - Test Results Window
 - Current Analysis
 - DC Current Analysis, 6-76
 - DC EMAX Auto, 6-76
 - DC In-Rush/Start-Up, 6-80, 6-89
- DC Assets, 5-40
 - Bar-to-Bar Test
 - Raise/Lower Leads, 5-49
 - Menu
 - File, 5-48
 - Options, 5-48
 - View, 5-48
 - Test Window
 - MCE, 5-40
- DC Bar-to-Bar
 - See Bar-to-Bar
- DC Standard Test, 5-40, 5-41, 5-52
 - Analysis, 5-79
 - DC Assets
 - MCE, 5-40
 - Menu
 - File, 5-41
 - Options, 5-41
 - View, 5-41
 - Step-By-Step Testing, 5-42
- Deck
 - Connections, 2-2
- Deenergized, 1-1, 1-4
 - Multimeter, 1-5
 - Verifying, 1-5
- Deleted Assets Folders, 4-26
- Dell Computer
 - Customer Service, 1-8
- Demod, 6-68
 - Current Transformer, 6-74
 - Test Window
 - Current Analysis
 - AC Induction Assets, 6-28
 - AC Synchronous Assets, 6-31
 - AC Wound Rotor Assets, 6-32
- Demodulation
 - See Demod
- Detailed
 - Report, 3-52
 - Create, 3-52
 - File Menu, 3-57
 - Multiple Asset, 3-59
 - Saved Reports List, 3-57
 - Single Asset, 3-52
- Dielectric Absorption, 5-45, 5-53
 - Analysis, 5-75
- Differential Current, 7-38
- Dimensions
 - Shipping Case, 2-16
 - Tester Case, 2-16
- Display Options
 - Current Analysis
 - DC Current Analysis, 6-78
 - DC In-Rush/Start-Up, 6-82
 - Demod, 6-71
 - Drive Input, 6-88
 - In-Rush/Start-Up, 6-65
 - Power Analysis
 - AC Assets
 - Power FFT, 7-25
 - Power Harmonics, 7-27
 - Power Instantaneous, 7-24
 - Power Phasor, 7-16
 - Power Voltage and Current FFT, 7-20
 - Power Voltage and Current Harmonics, 7-22
 - PowerTime Domain, 7-18
 - DC Assets
 - PowerTime Domain, 7-36

- Rotor Evaluation
 - Current Analysis, 6-52
- DownSync
 - Field Tester, 4-19
- Drive Input
 - Test Window
 - Current Analysis, 6-85
- E**
- EASA, 5-60
- Eccentricity, 1-3, 6-2, 6-58, 7-2
 - Current Analysis
 - Calculating Frequency, 6-60
 - Test Window
 - AC Induction Assets, 6-23
 - AC Synchronous Assets, 6-31
 - AC Wound Rotor Assets, 6-32
 - Frequency, 6-62
 - MCE, 5-71
 - Power Analysis, 7-2, 7-22
- Edit
 - Account, 4-14
 - Group, 4-17
 - Site, 4-18
- Edit Menu
 - Current Analysis
 - DC Current Analysis, 6-77
 - DC In-Rush/Start-Up, 6-81
 - Demod, 6-70
 - Drive Input, 6-87
 - In-Rush/Start-Up, 6-64
 - Rotor Evaluation, 6-50
 - Power Analysis
 - DC PowerTime Domain, 7-35
 - Power Phasor, 7-15
 - PowerResults, 7-29
 - Site Navigator, 3-19
 - Test History, 3-29
 - WatchList, 3-36
- Efficiency, 7-32
- Electrical Safety, 1-3
 - EMAX, 1-5
 - MCE, 1-4
- Electrical Symbols, 1-4
- EMAX
 - Auto, 3-18, 3-40, 7-1
 - Current Analysis, 6-49
 - Icon, 6-1
 - Power Analysis, 7-3
 - Test
 - Current Analysis
 - AC Induction Assets, 6-18
 - AC Synchronous Assets, 6-31
 - AC Wound Rotor Assets, 6-32
 - Electrical Safety, 1-5
 - Philosophy, 1-2
 - Power Analysis, 7-1
 - Quick Start, Procedure, 7-1
 - Specifications, 2-15
 - Test Leads
 - Current, 2-12
 - Voltage, 2-12
 - Test Selection, 7-1
 - Testing, 1-2, 7-1
- EMAX Power Analysis
 - EMAX Auto, 7-3
 - Getting Started, 7-2
 - Introduction, 7-2
 - Test Selection Window, 7-3
 - Asset Information, 7-4
 - Test List, 7-4
 - Test Setup, 7-5
 - Test Setup
 - DC Power Test, 7-8
 - Asset Test Location, 7-8
 - Carrier/LineFrequency, 7-9
 - Current Transformer Scale, 7-10
 - Potential Transformer Scale, 7-10
 - Probe Settings, 7-9
 - Starts With, 7-10
 - Power Test, 7-5
- Energized, 1-2
- Environmental Conditions
 - Tester, 2-9
- EPRI, 5-60
- Exit MCEGold, 3-59
 - Shuttle Parking, 3-60
- Export File, 3-18, 3-44
- F**
- Fast Fourier Transform (FFT), 6-53
- Fault Zone Report, 5-10
 - Menu
 - Edit, 5-11
 - File, 5-10
 - Options, 5-11
- Fault Zones, 3-18, 3-40
 - Export, 3-15
- Field Section Tests
 - DC Assets
 - Current Analysis, 6-45
 - MCE, 5-52
- Field Tester
 - DataSync, 4-19
 - DownSync, 4-19
 - Local, 4-18, 4-24

File Menu, 5-12, 5-25, 5-30, 5-36

AC Standard Test, 5-12

Bar-to-Bar Test, 5-48

Current Analysis

DC Current Analysis, 6-76

DC In-Rush/Start-Up, 6-80

Demod, 6-69

Drive Input, 6-86

In-Rush/Start-Up, 6-63

Rotor Evaluation, 6-49

DC Standard Test, 5-41

Polarization Index, 5-17

Power Analysis

DC PowerTime Domain, 7-34

Power Phasor, 7-14

PowerResults, 7-29

Resistor Bank, 5-36

RIC, 5-20

Step Voltage, 5-25

Synchronous, 5-30

Test History, 3-29

WatchList, 3-36

Find Peak

Current Spectrum, 6-54

In-Rush/Start-Up, 6-66, 6-83

FLA, 6-58, 6-62, 6-74

Folder

Add, 3-11

Deleted Assets, 4-26

Edit, 3-13

Move, 3-12

Remove, 3-13

Fp Amplitude, 6-58

Fp Frequency, 6-58

From Last Baseline, 3-30

G

Getting Started

Current Analysis, 6-2

EMAX Power Analysis, 7-2

Graph

Current Analysis

Display Methods, 6-54

In-Rush/Start-Up, 6-66, 6-83

Spectrum, 6-53

MCE

Eccentricity, 5-71

Rotor Bars, 5-71

Power Analysis

Voltage and Current Time Domain, 7-19

Graph Option Menu

Step Voltage, 5-25

Group Assignments, 4-13

H

harmonic, 7-30

Harmonic Factor, 7-33

Harmonics

Current Analysis

Eccentricity, 6-60

Power Analysis, 7-2

Current, THD, 7-31

Distortion, 7-33, 7-34

Voltage

Distortion, 7-31

Voltage and Current FFT, 7-22

Help Menu

Network, 4-7

High Resistance Connections, 7-2

Home Screen, 3-1

Asset

Add, 3-27

Summary, 3-21

EMAX Auto, 3-40

Exit MCEGold, 3-59

Shuttle Parking, 3-60

Export File, 3-44

Fault Zones, 3-40

Manage Templates, 3-4

MCE Auto, 3-40

Menu

Asset Manager

Asset

Add, 3-8

Copy, 3-9

Edit, 3-10

Move, 3-10

Remove, 3-10

Folder

Add, 3-11

Edit, 3-13

Move, 3-12

Remove, 3-13

Manage Templates, 3-3

Warning Settings, 3-7

Data

Export, 3-14

Fault Zones, 3-15

Single Asset, 3-14

Single Asset Import, 3-15

File, 3-2

Help

About, 3-16

Tutorial, 3-16

Message, 3-14

Options, 3-2

Date/Time, Time Zone, 3-3

Time Zone, 3-2

Windows, 3-16

- Message Center, 3-41
 - Asset
 - Condition, 3-44
 - Diagnostic, 3-44
 - Warning Levels, 3-44
 - Compose, 3-43
 - Menu
 - Edit, 3-42
 - File, 3-42
 - Option, 3-42
 - View, 3-42
 - Trash, 3-44
 - Nameplate, 3-22
 - Report, 3-45
 - AC EMAX Summary, 3-46
 - Asset Condition Code, 3-47
 - Asset Inventory, 3-48
 - Detailed, 3-52
 - File Menu, 3-57
 - Multiple Asset, 3-59
 - Saved Reports List, 3-57
 - Single Asset, 3-52
 - MCE Summary, 3-49
 - Message History, 3-50
 - PI/DA Summary, 3-51
 - Search, 3-32
 - Site Condition, 3-27
 - Site Navigator, 3-18
 - Status Bar Icon, 3-18
 - Test History, 3-27, 3-28
 - Test Selection, 3-32
 - Toolbar Icons, 3-17
 - Add Asset, 3-17, 3-27
 - Asset Summary, 3-17, 3-21
 - EMAX
 - Auto, 3-18, 3-40
 - Export File, 3-18, 3-44
 - Fault Zones, 3-18, 3-40
 - MCE Auto, 3-18, 3-40
 - Message, 3-18, 3-41
 - Nameplate, 3-17, 3-22
 - Report, 3-18
 - Search, 3-17, 3-32
 - Site Condition, 3-17, 3-27
 - Site Navigator, 3-17
 - Status Bar, 3-18
 - Test History, 3-17, 3-27
 - Test Selection, 3-17, 3-32
 - Warning Settings, 3-17, 3-31
 - WatchList, 3-18, 3-36
 - Warning Settings, 3-31
 - WatchList, 3-36
 - Add Asset, 3-38
 - Create, 3-37
 - Menu
 - Edit, 3-36
 - File, 3-36
 - Remove
 - Asset, 3-38
 - WatchList, 3-38
 - Reorder List, 3-39
 - Hot Stick, 1-5
- I**
- Icon
 - Also See Home Screen, Toolbar Icons
 - Create
 - Account, 4-7
 - Group, 4-7
 - Site, 4-7
 - EMAX Auto, 6-1, 6-3, 7-1
 - Show Manager, 4-7
 - System Activity, 4-7
 - Identification Tab
 - Nameplate, 3-22
 - Impedance, 7-31
 - Inductance Phase-to-Phase, 1-2
 - Inductive Imbalance, 1-2, 5-75, 5-76
 - AC Asset
 - Standard Test, 5-53
 - AC Induction Motor
 - Standard Test, 5-75
 - AC Synchronous Motor
 - RIC, 5-74, 5-75
 - Standard Test, 5-76
 - AC Wound Rotor Motor
 - RIC, 5-77
 - Standard Test, 5-77, 5-78
 - Phase-to-Phase Inductance, 5-62, 5-63
 - In-Rush/Start-Up, 1-3, 6-2, 6-63
 - Current Analysis
 - Test Window
 - AC Induction Assets, 6-25
 - AC Synchronous Assets, 6-31
 - AC Wound Rotor Assets, 6-32
 - Introduction
 - Current Analysis, 6-2
 - EMAX Power Analysis, 7-2
 - MCE, 5-2
- L**
- Label
 - Connection, 2-4
 - Identification, 2-4
 - Laptop Computer
 - See Computer, Laptop

Leakage Current, 5-64

Line Frequency, 6-57, 6-63

See Also Carrier Frequency

Load Variance

Maximum, 6-74

M

Manage Templates, 3-4

Manual Mode (MCE Testing)

AC Induction

Standard, 5-16, 5-40, 5-44

Manufacturer Tab

Nameplate, 3-22

MCE

AC Induction

MCE Auto Test, 5-7

Fault Zone Report, 5-10

Menu

File, 5-8

Options, 5-8

Test Button, 5-9

Analysis

AC Induction Motors

Rotor Influence Check, 5-74

AC Standard Test, 5-75

Wound Rotor, 5-77

AC Synchronous Motors, 5-75

AC Synchronous Test, 5-76

AC Wound Rotor Motors, 5-77

Average Inductance, 5-63

Bar-to-Bar, 5-74, 5-79

Capacitance-to-Ground, 5-57

DC Assets, 5-79

Dielectric Absorption, 5-79

Polarization Index, 5-79

DC Standard Test, 5-79

Dielectric Absorption, 5-75, 5-76, 5-78

Inductive Imbalance, 5-63

Phase-to-Phase Inductance, 5-61

Phase-to-Phase Resistance, 5-59

Polarization Index, 5-64, 5-75, 5-76, 5-77, 5-78

Resistance-to-Ground, 5-53

Resistive Imbalance, 5-63

Resistor Bank, 5-78

Rotor Influence Check, 5-67, 5-75, 5-77

Test Lead Resistance, 5-63

Capacitance-to-Ground, 1-1

Commutator Bar-to-Bar, 1-2

DC Assets

Analysis

Dielectric Absorption, 5-79

Polarization Index, 5-79

Armature Section Tests, 5-40

DC Standard Test, 5-40

Field Section

DC Standard, 5-52

MCE Auto, 5-52

Polarization Index, 5-52

Step Voltage, 5-53

Tests, 5-52

MCE Auto Test, 5-40

Electrical Safety, 1-4

Inductance Phase-to-Phase, 1-2

Inductive Imbalance, 1-2

Introduction, 5-2

Phase-to-Phase Resistance, 1-2

Polarization Index, 1-2

Quick Start

Procedure, 5-1, 6-1

Resistive Imbalance, 1-2

Rotor Influence Check, 1-2

Specifications, 2-14

Standard Test

Data Analysis, 5-53

Test Leads, 2-10

Test Procedure

AC Induction Motors

Rotor Influence Check (RIC), 5-21, 5-26, 5-31, 5-37

DC Motors

Armature Circuit

Bar-to-Bar, 5-47

Polarization Index, 5-45

Step Voltage, 5-47

Field Circuit

Polarization Index, 5-53

Test Selection, 5-3

Asset

Information, 5-5

Temperature, 5-6

Test Location, 5-5

Button

Cancel, 5-6

Reset, 5-6

Save, 5-6

Test, 5-6

Charge Time, 5-6

Resistance-to-Ground, 5-6

Span, 5-6

Test

Frequency, 5-6

List, 5-4

Setup, 5-5

Voltage, 5-6

Test Window

AC Induction, 5-7

AC Synchronous, 5-29

Field Section, 5-30

- Stator Section, 5-29
- AC Wound Rotor, 5-34
 - Resistor Bank Section, 5-35
 - Rotor Section, 5-35
 - Stator Section, 5-35
- ACWound Rotor
 - Resistor Bank Test, 5-36
- DC Assets, 5-40
- MCE Auto, 3-18, 3-40, 5-52
 - AC Induction
 - MCE, 5-7
 - DC Assets
 - Field Section Tests
 - MCE, 5-52
 - MCE, 5-40
- MCE Auto Test, 5-7, 5-40
 - Fault Zone Report, 5-10
- Menu
 - File, 5-8
 - Options, 5-8
 - Test Button, 5-9
- MCE Summary
 - Report, 3-49
- MCEGold
 - Home Screen, 3-1
 - Starting, 3-1
 - Tutorials, 3-1
- Megger Voltage, 5-56
- Menus
 - Power Analysis
 - Power FFT, 7-25
 - Power Harmonics, 7-27
 - Power Instantaneous, 7-24
 - Power Time Domain, 7-18
 - Power Voltage and Current FFT, 7-20
 - Power Voltage and Current Harmonics, 7-22
- Message Center, 3-41
 - Asset
 - Condition, 3-44
 - Diagnostic, 3-44
 - Warning Levels, 3-44
 - Compose, 3-43
 - Menu
 - Edit, 3-42
 - File, 3-42
 - Option, 3-42
 - View, 3-42
 - Trash, 3-44
- Message History
 - Report, 3-50
- Multimeter, 1-5
- Multi-site Version, 3-19

N

- Nameplate, 3-17, 3-22
 - Armature Tab, 3-26
 - Bearing Tab, 3-24
 - Brush Assembly Tab, 3-26
 - Identification Tab, 3-22
 - Manufacturer Tab, 3-22
 - Nameplate 1 Tab, 3-23
 - Nameplate 2 Tab, 3-24
 - Resistor Bank Tab, 3-25
- Network
 - Account Manager, 4-6
 - Icon
 - Create Account, 4-7
 - Create Group, 4-7
 - Create Site, 4-7
 - Menu
 - Data, 4-7
 - Help, 4-7
 - Windows, 4-7
 - Show Manager Icon, 4-7
 - System Activity Icon, 4-7
 - Window, 4-8
 - Add Account to Group, 4-11
 - Create
 - New Account, 4-12
 - New Group, 4-10
 - Site, 4-9
 - Deleted Assets Folders, 4-26
 - Desktop, 4-1
 - Edit
 - Account, 4-14
 - Group, 4-17
 - Site, 4-18
 - Field Tester
 - Clear Local Database, 4-23
 - DataSync, 4-19
 - DownSync, 4-19
 - Two Way Sync, 4-23
 - UpSync, 4-22
 - Field Tester Local, 4-1, 4-18, 4-24
 - Field Tester Network, 4-1, 4-18
 - Group Assignments, 4-13
 - New Assets Folders, 4-27
 - Tutorials, 4-27
 - Utility Program, 4-2
 - Calibration, 4-6
 - Database, 4-4
 - Desktop Database, 4-4
 - License Key, 4-3
 - Network Tester Database, 4-5
 - Server, 4-5
- New Assets Folders

Network, 4-27
NP Speed RPM, 6-74

O

One-Up/Two Down
 Two-Up/One-Down, 5-73
Online, 1-2
Option Menu
 Message Center, 3-42
Options Menu, 5-13, 5-26, 5-31, 5-37
 AC Standard Test, 5-13
 Bar-to-Bar Test, 5-48
 Current Analysis
 DC Current Analysis, 6-77
 DC In-Rush/Start-Up, 6-81
 Demod, 6-70
 Drive Input, 6-87
 In-Rush/Start-Up, 6-64
 Rotor Evaluation, 6-51
 DC Standard Test, 5-41
 Polarization Index, 5-17
 Power Analysis
 DC PowerTime Domain, 7-35
 Power Phasor, 7-16
 PowerResults, 7-29
 Resistor Bank, 5-37
 RIC, 5-21
 Step Voltage, 5-26
 Synchronous, 5-31

P

Parallel Port, 2-8
PCMCIA
 Port, 2-8
 Slot, 2-8
PdMA
 Contact Information, 1-6
Peak, 6-62
 Speed, 6-63
Phase Angle, 7-7
Phase Configuration, 7-7
Phase Sequence, 7-7
Phase-to-Phase Inductance, 5-61, 5-71
 Data Interpretation, 5-62
 See Inductance Phase-to-Phase
 Warning Levels, 5-62
Phase-to-Phase Resistance, 5-59
 Data Interpretation, 5-60
 Warning Levels, 5-60
Phase-to-Phase Shorts, 5-73
Philosophy
 EMAX, 1-2
PI/DA Summary

Report, 3-51
Polarization Index, 1-2, 5-17, 5-52, 5-64
 AC Induction, 5-16
 Analysis, 5-64, 5-75
 Data Interpretation, 5-65
 Field Section Tests
 DC Assets
 MCE, 5-52
Menu
 File, 5-17
 Options, 5-17
Profile, 5-65
Test Procedure
 DC Motors
 Armature Circuit, 5-45
 Field Circuit, 5-53
 Warning Levels, 5-65
 Wound Rotor, 5-77
Pole Face, 5-69, 5-71
Pole Pass
 Alarm Level, 6-75
 Peak Frequency, 6-75
 Peak Level, 6-75
Ports
 Parallel, 2-8
 PCMCIA, 2-8
 Serial, 2-8
Potential Transformer Scale, 7-7
 DC Power Test
 Test Setup
 EMAX Power, 7-10
Power Analysis, 1-3
 AC Assets
 Power Phasor, 7-14
 Power FFT, 7-26
 Display Options, 7-25
 Menus, 7-25
 Power FFT, 7-25
 Power Harmonics, 7-28
 Display Options, 7-27
 Menus, 7-27
 PowerHarmonics, 7-27
 Power Instantaneous, 7-24
 Display Options, 7-24
 Menus, 7-24
 Power Instantaneous, 7-23
 Power Phasor
 AC Assets
 Analysis, 7-14
 Display Options, 7-16
 Menu
 Edit, 7-15
 File, 7-14
 Options, 7-16
 View, 7-15

- Related Windows Menu, 7-16
- Review Phasor Diagram, 6-88, 7-17
- Power Results, 7-30
 - Menu
 - Edit, 7-29
 - File, 7-29
 - Options, 7-29
 - Related Windows, 7-30
 - Power Results, 7-28
- Power Time Domain
 - Display Options, 7-18
 - Review Time Domain, 7-19
- Power Voltage and Current
 - Display Options, 7-20
 - Menus, 7-20
- Power Voltage and Current FFT, 7-20, 7-21
- Power Voltage and Current Harmonics, 7-22, 7-23
 - Display Options, 7-22
 - Menus, 7-22
- PowerTime Domain, 7-18
 - Display Options, 7-36
 - Menu
 - Edit, 7-35
 - File, 7-34
 - Options, 7-35
 - Menus, 7-18
- Results Page
 - Review
 - Current, 7-31
 - Efficiency, 7-32
 - Impedance, 7-31
 - Power, 7-31
 - Sequence, 7-32
 - Voltage, 7-30
- Setup Options
 - Asset Test Location, 7-5
 - Button
 - Cancel, 7-8, 7-10
 - Reset, 7-10
 - Save, 7-7, 7-10
 - Test, 7-7, 7-10
 - Carrier/Line Frequency, 7-6
 - Current Transformer Scale, 7-6
 - Phase
 - Angle, 7-7
 - Configuration, 7-7
 - Sequence, 7-7
 - Potential Transformer Scale, 7-7
 - Probe Settings, 7-6
 - Starts With, 7-7
- Setup Options Button
 - Reset, 7-7
- Test Window, 7-10
 - Step-by-Step Power
 - AC Induction Assets, 7-10
 - AC Synchronous Assets, 7-12
 - AC Wound Rotor Assets, 7-12
 - DC Assets
 - Armature, 7-12
 - Field Section, 7-14
 - View Data, 7-1
 - Warning Settings, 7-38
 - Change, 7-39
- Power and Current FFT, 7-20
- Power FFT
 - Power Analysis, 7-25
- Power Harmonics
 - Power Analysis, 7-27
- Power Instantaneous
 - Power Analysis, 7-23
- Power Results
 - Power Analysis, 7-28
- Power Test, 7-5
 - EMAX Power Analysis
 - Test Setup
 - Power Test, 7-5
- Power Time Domain, 7-18, 7-34
 - DC Power Analysis, 7-34
 - Power Analysis, 7-18
- Power Voltage and Current FFT, 7-21
 - Power Analysis, 7-20
- Power Voltage and Current Harmonics
 - Power Analysis, 7-22
- Probe Settings, 7-6
 - DC Power Test
 - Test Setup
 - EMAX Power, 7-9
- Probes
 - Current, 6-2
 - Voltage, 7-2
- Procedure
 - MCE Testing
 - AC Induction Motors
 - Rotor Influence Check, 5-21, 5-26, 5-31, 5-37
 - DC Motors
 - Field Circuit
 - Polarization Index, 5-53
 - Quick Start, 5-1, 6-1
 - Quick Start
 - Current Analysis Testing, 6-1
 - EMAX Testing, 7-1

Q

- Quality Assurance, 1-1
- Quick Start
 - Current Analysis, 6-1

- EMAX, 7-1
 - MCE, 5-1, 6-1
- R**
- Raise/Lower Leads
 - Bar-to-Bar Test, 5-49
 - Raw Data
 - Test History, 3-29
 - Recommended Actions
 - MCE Analysis
 - AC Induction Motors, 5-75
 - AC Wound Rotor Motor, 5-77, 5-78
 - DC Motors, 5-79
 - Synchronous Motors, 5-75, 5-76
 - Related Windows Menu
 - Current Analysis
 - DC Current Analysis, 6-78
 - Demod, 6-71
 - Drive Input, 6-88
 - Rotor Evaluation, 6-52
 - Power Analysis
 - Power Phasor, 7-16
 - Power Results, 7-30
 - Remove
 - WatchList, 3-38
 - WatchList Asset, 3-38
 - Reorder
 - WatchList, 3-39
 - Report, 3-45
 - AC EMAX Summary, 3-46
 - Asset Condition Code, 3-47
 - Asset Inventory, 3-48
 - Detailed, 3-52
 - Create, 3-52
 - File Menu, 3-57
 - MCE Summary, 3-49
 - Message History, 3-50
 - PI/DA Summary, 3-51
 - Toolbar Icon, 3-18
 - Reset Button
 - Test Selection
 - MCE, 5-6
 - Resistance Phase-to-Phase, 1-2
 - Resistance-to-Ground, 1-1
 - Test Selection
 - MCE, 5-6
 - Warning Levels, 5-53
 - Resistive Imbalance, 1-2, 5-59, 5-63
 - Resistor Bank, 5-78
 - Step-By-Step Testing, 5-37
 - Test, 5-36
 - View Menu, 5-36
 - Resistor Bank Tab
 - Nameplate, 3-25
 - Returning
 - Tester, 1-6
 - Review
 - Power Analysis
 - Phasor Diagram, 7-17
 - Power Phasor, 6-88
 - Power FFT, 7-26
 - Power Harmonics, 7-28
 - Power Instantaneous, 7-24
 - Power Results, 7-30
 - Power Time Domain, 7-36
 - Power Voltage and Current FFT, 7-21
 - Power Voltage and Current Harmonics, 7-23
 - Test History, 7-32, 7-37
 - Time Domain, 7-19
 - Review Spectrum
 - Current Analysis
 - DC Current Analysis, 6-80
 - DC In-Rush/Start-Up, 6-83
 - Demod, 6-73
 - Eccentricity, 6-59
 - In-Rush/Start-Up, 6-66
 - Rotor Evaluation, 6-53
 - Review Test History
 - Current Analysis
 - DC In-Rush/Start-Up, 6-84
 - Demod, 6-73
 - Eccentricity, 6-61
 - In-Rush/Start-Up, 6-67
 - Rotor Evaluation, 6-57
 - Review Time Domain
 - Current Analysis
 - DC Current Analysis, 6-80
 - Eccentricity, 6-60
 - RIC
 - AC Induction
 - RIC, 5-20
 - Menu
 - File, 5-20
 - Options, 5-21
 - View, 5-20
 - Step-By-Step Testing, 5-21
 - RJ45 Cable, 2-5
 - RMS Amps, 6-58, 6-63
 - RMS Amps 1, 6-75
 - Rotor
 - Position, 5-68
 - Rotor Bar
 - Defects, 5-68, 5-71, 6-2
 - Graph, 5-71
 - Rotor Evaluation, 1-3
 - Analysis, 6-49
 - Test Window
 - Current Analysis
 - AC induction Assets, 6-20

- AC Synchronous Assets, 6-31
- AC Wound Rotor Assets, 6-32
- Rotor Influence Check, 1-2
 - AC Induction Motors
 - Test Procedure, 5-21, 5-26, 5-31, 5-37
 - Aliasing, 5-68, 5-69
 - Analysis, 5-67
 - AC Synchronous Motors, 5-75
 - AC Wound Rotor Motors, 5-77
 - Average Inductance, 5-63
 - Inductive Imbalance, 5-63
 - Phase-to-Phase Inductance, 5-61
 - Data Interpretation, 5-69
 - MCE
 - Analysis, 5-74
- S**
- Safety
 - Electrical, 1-3
 - EMAX, 1-5, 6-2, 7-2
 - MCE, 1-4
 - Precautions, 5-3
 - Equipment
 - Tagouts, 5-21, 5-26, 5-31, 5-37
 - Personnel, 1-5
- Save As Excel
 - Test History, 3-29
- Save Button
 - Test Selection
 - MCE, 5-6
- Search, 3-32
 - Advanced, 3-33
 - Search Buttons, 3-35
 - Search Criteria, 3-34
 - Toolbar Icon, 3-17
- Self Impedance Imbalance, 7-34
- Sequence, 7-32
- Serial
 - Number (of tester), 2-4
 - Port, 2-8
- Set as Baseline
 - Test History, 3-30
- Set Condition Code
 - Test History, 3-31
- Shipping
 - Case, 2-1
 - Specifications, 2-16
 - Tester, 2-9
- Shorts
 - Phase-to-Phase, 5-73
 - Turn-to-Turn, 5-73
- Show All Tests
 - Test History, 3-29
- Show Manager
 - Network, 4-7
- Show/Hide
 - Test History, 3-30
- Shuttle Parking, 3-60
- Single Asset
 - Export, 3-14
 - Import, 3-15
- Site Condition, 3-27
 - Icon, 3-17
- Site Navigator, 3-18
 - Icon, 3-17
- Menu
 - Edit, 3-19
 - View, 3-19
 - Multi-site Version, 3-19
- Span
 - Test Selection
 - MCE, 5-6
- Specifications
 - EMAX, 2-15
 - MCE, 2-14
 - Shipping Case, 2-16
 - Tester Case, 2-16
- Spectrum
 - Eccentricity, 6-59
- Speed
 - Alarm Level, 6-75
 - Peak Level, 6-75
 - PeakFrequency, 6-75
 - RPM, 6-57, 6-74
 - Select, 6-54
- Standard Test
 - Data Analysis, 5-53
- Starts With
 - Test Selection
 - AC Power Test, 7-7
 - Test Setup
 - DC Power Test, 7-10
- Stator Winding Defects, 6-2, 7-2
- Status Bar Icon, 3-18
- Step Voltage, 1-2, 5-25, 5-26, 5-53
 - AC Induction
 - Step Voltage, 5-24
 - Field Section Tests
 - DC Assets
 - MCE, 5-53
 - Test Procedure
 - DC Motors
 - Armature Circuit, 5-47
 - View Menu, 5-25
- Step-by-Step
 - Current Analysis
 - AC Induction Assets

- Demod, 6-28
 - Eccentricity, 6-23
 - EMAX Auto, 6-18
 - In-Rush/Start-Up, 6-25
 - Rotor Evaluation, 6-20
 - DC Assets
 - DC EMAX Auto, 6-32
 - Drive Input, 6-43
 - In-Rush/Start-Up, 6-45
 - Power Analysis
 - Test Window
 - A C Wound Rotor Assets, 7-12
 - AC Induction Assets, 7-10
 - AC Synchronous Assets, 7-12
 - DC Assets
 - Armature Section, 7-12
 - Field Section, 7-14
 - Step-By-Step Testing
 - AC Standard Test, 5-13
 - Bar-to-Bar, 5-49
 - DC Standard Test, 5-42
 - Polarization Index, 5-17
 - Resistor Bank, 5-37
 - RIC, 5-21
 - Step Voltage, 5-26
 - Synchronous, 5-31
 - Surge
 - Capacitors, 5-3, 5-58
 - Symbols
 - Electrical, 1-4
 - Synchronous, 5-30, 5-31
 - Step-By-Step Testing, 5-31
 - View Menu, 5-31
 - Synchronous Test
 - Recommended Actions, 5-76
 - System Activity Icon
 - Network, 4-7
- T**
- Tab, Nameplate. See Nameplate
 - Technical Support, 1-6
 - Temperature Correction, 5-55
 - Templates
 - Add New, 3-4
 - Change Name, 3-5
 - Change Values, 3-6
 - Copy, 3-5
 - Remove, 3-5
 - Test
 - Leads
 - Current, 6-2
 - Voltage, 7-2
 - Procedure. See Procedure
 - Test History, 3-27, 3-28
 - Icon, 3-17
 - Menu
 - Edit, 3-29
 - Copy, 3-29
 - Create Message, 3-29
 - File, 3-29
 - Save As Excel, 3-29
 - Options
 - Set Condition Code, 3-31
 - Show/Hide, 3-30
 - View
 - Raw Data, 3-29
 - Warning Settings, 3-30
 - Test Menu
 - Show Tests
 - All Tests, 3-29
 - From Last Baseline, 3-30
 - Set as Baseline, 3-30
 - Warning Settings Menu, 3-30
 - Test Leads
 - Bar-to-Bar, 2-11
 - EMAX Current, 2-12
 - EMAX Voltage, 2-12
 - MCE, 2-10
 - Test List
 - Test Selection Window
 - EMAX Power Analysis, 7-4
 - Test Results
 - % Current Imbalance, 6-58
 - % Full Load Amps, 6-58
 - % Slip, 6-57
 - Current Analysis
 - Demod, 6-74
 - Eccentricity, 6-62
 - Rotor Evaluation, 6-57
 - FLA, 6-58
 - Fp Amplitude, 6-58
 - Fp Frequency, 6-58
 - Line Frequency, 6-57
 - RMS Amps, 6-58
 - Speed RPM, 6-57
 - Test Selection, 3-32
 - EMAX, 7-1
 - Icon, 3-17
 - MCE, 5-3
 - Test
 - Button, 5-6
 - Frequency, 5-6
 - List, 5-4
 - Setup, 5-5
 - Test Selection Window
 - Asset Information, 6-5
 - Current Analysis, 6-3
 - EMAX Power Analysis, 7-3
 - Setup Options

- Asset Test Location, 6-13, 7-5
 - Button
 - Cancel, 6-17, 7-8, 7-10
 - Reset, 6-17, 7-7, 7-10
 - Save, 6-17, 7-7, 7-10
 - Capture Length, 6-16
 - Carrier Frequency, 6-14
 - Carrier/Line Frequency, 7-6
 - Channel, 6-16
 - Current Transformer Scale, 6-14, 7-6
 - Missing Currents, 6-15
 - Phase Angle, 6-15, 7-7
 - Phase Configuration, 6-15, 7-7
 - Phase Sequence, 6-15, 7-7
 - Potential Transformer Scale, 6-14, 7-7
 - Pre-Trigger Length, 6-15
 - Probe Settings, 6-14, 7-6
 - Starts With, 7-7
 - EMAX Auto, 6-16
 - Test Button, 6-17, 7-7, 7-10
 - Trigger
 - Factor, 6-15
 - Type, 6-15
 - Test List, 6-4
 - Test Setup
 - Current Analysis, 6-5
 - DC Current Analysis, 6-11
 - DC EMAX Auto, 6-10
 - DC In-Rush/Start-Up, 6-12
 - Demod, 6-9
 - Drive Input, 6-13
 - Eccentricity, 6-7
 - EMAX Auto, 6-5
 - In-Rush/Start-Up, 6-8
 - Rotor Evaluation, 6-6
 - Test Setup
 - Test Selection Window
 - EMAX Power Analysis
 - Test Setup, 7-5
 - Test Voltage
 - Resistance-to-Ground, 5-56
 - Test Window
 - Current Analysis, 6-17
 - MCE, 5-7
 - Power Analysis, 7-10
 - Tester
 - Accessory Bag, 2-9
 - Battery, 2-6
 - Care, 2-8
 - Charger, 2-8
 - Indicator, 2-5
 - Calibration, 1-6, 2-1, 2-9
 - Care and Handling, 2-8
 - Case, 2-2
 - Care, 2-8
 - Specifications, 2-16
 - Components, 2-4
 - DAQ Cable, 2-5
 - Deck, 2-2
 - Connections, 2-2
 - Environmental Conditions, 2-9
 - Identification Label, 2-4
 - Laptop Computer, 2-2
 - Returning, 1-6
 - RJ45 Cable, 2-5
 - Serial Number, 2-4
 - Shipping, 2-9
 - Testing
 - EMAX, 1-2
 - EMAX Auto, 3-40
 - MCE Auto, 3-40
 - Time Domain, 6-60
 - Trash
 - Message Center, 3-44
 - Trending, 1-1, 5-3
 - Turn-to-Turn Shorts, 5-73
 - Tutorials, 3-16, 4-27
 - Network, 4-27
 - Two Way Sync
 - Field Tester, 4-23
 - Two-Up/One-Down
 - One-Up/Two Down, 5-73
- ## U
- UpSync
 - Field Tester, 4-22
 - Utility Program
 - Calibration, 4-6
 - Database, 4-4
 - Desktop Database, 4-4
 - License Key, 4-3
 - Network, 4-2
 - Network Tester Database, 4-5
 - Server, 4-5
- ## V
- View
 - Current Analysis
 - Data, 6-1
 - View Data
 - Power Analysis, 7-1
 - View Menu
 - AC Standard Test, 5-13
 - Bar-to-Bar Test, 5-48
 - Current Analysis
 - DC Current Analysis, 6-77

- Demod, 6-70
- Drive Input, 6-87
- Rotor Evaluation, 6-50
- DC Standard Test, 5-41
- Message Center, 3-42
- Power Analysis
 - Power Phasor, 7-15
- Resistor Bank, 5-36
- RIC, 5-20
- Site Navigator, 3-19
- Step Voltage, 5-25
- Synchronous, 5-31
- Test History, 3-29
- Voltage, 7-30
 - Crest Factor, 7-33
 - Imbalance, 7-33
 - Line-to-Line, 7-33
 - Probes, 6-2, 7-2
 - Spikes, 7-2
 - Test Selection
 - MCE, 5-6
 - THD, 7-33, 7-38

W

- Warning Levels, 5-65
 - Capacitance-to-Ground, 5-57
 - Inductance Phase-to-Phase, 5-62
 - Message Center, 3-44
 - Phase-to-Phase Resistance, 5-60
 - Polarization Index, 5-65
 - Resistance Phase-to-Phase, 5-60
 - Resistance-to-Ground, 5-53
- Warning Settings, 3-31
 - Asset Manager, 3-7
 - Current Analysis, 6-89
 - Change, 6-91
 - Icon, 3-17
 - Power Analysis, 7-38
 - Change, 7-39
 - Test History, 3-30
- Warranty
 - Computer, 1-8
 - Data Analysis, 1-8
 - Extended, 1-8
 - Hardware, 1-7
 - Maintenance Contracts, 1-8
 - Replacement Parts, 1-8
 - Software, 1-8
- WatchList, 3-36
 - Icon, 3-18
- Windows, 3-16
 - Menu
 - Network, 4-7
- Wound Rotor