

# TABLE OF CONTENTS

## COPYRIGHT INFORMATION

## TABLE OF CONTENTS

## HOW TO USE THIS MANUAL

Overview.....	xiii
Tutorials.....	xiii
Conventions Used.....	xiii
Symbols .....	xv
Common Terms Used .....	xvi

## INTRODUCTION

Description of Product .....	1-1
Motor Testing Philosophy .....	1-1
MCE.....	1-1
EMAX .....	1-2
Electrical Safety Precautions .....	1-3
Warning .....	1-3
MCE.....	1-4
EMAX .....	1-5
Technical Support.....	1-6
Returning the Tester to PdMA.....	1-6
Warranty .....	1-7

## HARDWARE

Shipping Case .....	2-1
Tester .....	2-2
Case.....	2-2
Components.....	2-4
Tester Battery.....	2-6
Laptop Computer .....	2-7
General .....	2-7
Laptop Battery .....	2-8
Computer Ports.....	2-8
Tester Care and Handling.....	2-8
Tester Environmental Conditions.....	2-9
Storage.....	2-9
Shipping.....	2-9
Accessory Bag .....	2-9
Accessories .....	2-9
MCE Test Leads .....	2-10
DC Commutator Bar-to-Bar Test Leads.....	2-11
EMAX Test Leads .....	2-12
Specifications.....	2-14
MCE .....	2-14
EMAX .....	2-15
Hardware .....	2-16

## MCEGOLD

Introduction.....	3-1
Tutorials.....	3-1
Starting MCEGold .....	3-1

MCEGold Home Window .....	3-2
Title Bar .....	3-2
Menu .....	3-2
Toolbar.....	3-27
Site Navigator Window .....	3-28
Asset Summary.....	3-31
Site Condition .....	3-32
Nameplate .....	3-33
Identification Tab .....	3-34
Manufacturer Tab .....	3-34
Nameplate 1 Tab.....	3-35
Nameplate 2 Tab.....	3-36
Bearing Tab .....	3-36
Resistor Bank Tab .....	3-37
Brush Assembly Tab .....	3-37
Armature Tab.....	3-38
Add Asset.....	3-38
Warning Settings .....	3-38
Test History .....	3-39
Test History Menu.....	3-41
Test Selection.....	3-43
Search .....	3-44
Simple Search.....	3-44
Advanced Search.....	3-45
Search Criteria .....	3-45
Search Buttons.....	3-47
WatchList.....	3-47
WatchList Menu .....	3-48
Create a WatchList .....	3-49
Add Asset to WatchList.....	3-50
Delete WatchList .....	3-50
Delete Asset From WatchList .....	3-50
Asset List Section .....	3-51
MCE Auto.....	3-40
MCE Auto Test.....	3-40
EMAX Auto.....	3-40
EMAX Auto Test .....	3-40
Fault Zones .....	3-40
Message Center.....	3-41
Message Center Menu .....	3-42
View Notes .....	3-42
Compose .....	3-43
Asset Diagnostic .....	3-44
Asset Condition .....	3-44
Asset Warning Levels.....	3-44
Trash .....	3-44
Export File .....	3-44
Report .....	3-45
AC EMAX Summary .....	3-46
Asset Condition Code .....	3-47
Asset Inventory.....	3-48
MCE Summary .....	3-49
Message History .....	3-50
PI/DA Summary .....	3-51
Detailed Report.....	3-52

Exiting MCEGold .....	3-59
Shuttle Parking .....	3-60
MCEGold Lite Introduction.....	3-78
Starting Lite .....	3-78
Lite Home Screen .....	3-79
Title Bar .....	3-80
Asset Selected .....	3-80
Search .....	3-80
Left Panel.....	3-80
Center Panel.....	3-80
Right Panel .....	3-81
Testing Buttons.....	3-81
Toolbar.....	3-81

**MCEGOLD NETWORK**

Utility Program .....	4-2
License Key .....	4-3
Database.....	4-4
Desktop Database Utility.....	4-4
Network Tester Database Utility .....	4-5
Server (Desktop Only).....	4-5
Calibration (Tester Only).....	4-6
MCEGold Account Manager .....	4-6
Account Manager Menu Items .....	4-7
Account Manager Tool Bar Icons.....	4-7
Account Manager Window.....	4-8
Create a Site.....	4-9
Create New Group .....	4-10
Add Accounts to Group .....	4-11
Create a New Account.....	4-12
Assigning Group Assignments and Account Rights .....	4-13
Editing Account, Group, and Site.....	4-14
Edit Account.....	4-14
Remove Account .....	4-16
Edit Group .....	4-17
Remove Group.....	4-17
Edit Site .....	4-18
Field Tester, Local and Network .....	4-18
DataSync.....	4-19
DownSync .....	4-19
UpSync .....	4-22
Two Way Sync .....	4-23
Clear Local Database.....	4-23
Field Tester Local .....	4-24
Deleted and New Assets Folders .....	4-26
Deleted Assets Folder.....	4-26
New Assets Folder.....	4-27
Tutorials.....	4-27

**MCE**

Testing Quick Start .....	5-1
Introduction.....	5-2
Test Selection Window .....	5-3
Test List .....	5-4
Asset Information .....	5-5
MCE Test Setup.....	5-5

Asset Test Location .....	5-5
Test Frequency .....	5-6
Resistance-to-Ground.....	5-6
Voltage .....	5-6
Asset Temperature.....	5-6
Span .....	5-6
Charge Time .....	5-6
Test Button .....	5-6
Save Button.....	5-6
Reset Button .....	5-6
Cancel Button .....	5-6
Test Window.....	5-7
AC Induction Assets .....	5-7
MCE Auto Test.....	5-7
Fault Zone Report.....	5-10
AC Standard Test .....	5-12
Polarization Index.....	5-16
RIC .....	5-20
Step Voltage .....	5-24
Step-by-Step Step Voltage Testing .....	5-26
AC Synchronous Assets .....	5-29
Stator Section Test.....	5-29
Field Section Tests .....	5-30
AC Wound Rotor Assets .....	5-34
Stator Section Tests .....	5-35
Rotor Section Tests.....	5-35
Resistor Bank Section Tests .....	5-35
DC Assets .....	5-40
Armature Section Tests .....	5-40
Field Section Tests .....	5-52
Test Data Analysis Information.....	5-53
Standard Test .....	5-53
Resistance-to-Ground.....	5-53
Capacitance-to-Ground.....	5-57
Phase-To-Phase Resistance .....	5-59
Phase-to-Phase Inductance .....	5-61
Test Lead Check .....	5-63
Resistive Imbalance.....	5-63
Inductive Imbalance .....	5-63
Average Inductance .....	5-63
Polarization Index Test.....	5-64
What Does it Tell You?.....	5-64
Why Is This Important?.....	5-65
Setting Warning Levels .....	5-65
Data Interpretation.....	5-65
Examples .....	5-66
Rotor Influence Check (RIC).....	5-67
Why Is This Important?.....	5-68
Rotor Position And Aliasing .....	5-68
Data Interpretation.....	5-69
DC Bar-to-Bar Test.....	5-74
What Does It Tell You?.....	5-74
Why Is This Important?.....	5-74
Data Interpretation.....	5-74
MCE Analysis.....	5-74

AC Induction Assets .....	5-74
Rotor Influence Check (RIC) .....	5-74
Standard Test .....	5-75
Polarization Index/Dielectric Absorption .....	5-75
AC Synchronous Assets .....	5-75
Stator.....	5-75
Field Circuit.....	5-76
AC Wound Rotor Assets .....	5-77
Stator.....	5-77
Rotor .....	5-77
Resistor Bank.....	5-78
DC Assets .....	5-79
Armature Circuit.....	5-79
Field Circuit.....	5-79

## EMAX CURRENT ANALYSIS

Testing Quick Start .....	6-1
View Data .....	6-1
Introduction.....	6-2
Getting Started .....	6-2
Test Selection Window .....	6-3
Test List .....	6-4
Asset Information .....	6-5
Test Setup .....	6-5
AC Assets .....	6-5
DC Asset.....	6-10
Set-up Options .....	6-13
Asset Test Location .....	6-13
Probe Settings.....	6-14
Carrier Frequency/Line Frequency.....	6-14
Current Transformer Scale .....	6-14
Potential Transformer Scale .....	6-14
Phase Configuration .....	6-15
Phase Angle .....	6-15
Missing Currents .....	6-15
Phase Sequence .....	6-15
Trigger Type (In-Rush/Start-Up only) .....	6-15
Pre-Trigger Length (In-Rush/Start-Up only).....	6-15
Trigger Factor (In-Rush/Start-Up only) .....	6-15
Channel (In-Rush/Start-Up only) .....	6-16
Capture Length (In-Rush/Start-Up only).....	6-16
Starts With .....	6-16
Test Button .....	6-17
Save Button .....	6-17
Reset Button .....	6-17
Cancel Button .....	6-17
Test Window .....	6-17
AC Induction Assets .....	6-18
EMAX Auto .....	6-18
Rotor Evaluation.....	6-20
Eccentricity.....	6-23
In-Rush/Start-Up .....	6-25
Demod .....	6-28
AC Synchronous.....	6-31
EMAXAuto .....	6-31

Rotor Evaluation.....	6-31
Eccentricity.....	6-31
In-Rush/Start-Up .....	6-31
Demod .....	6-31
AC Wound Rotor.....	6-32
EMAX Auto .....	6-32
Rotor Evaluation.....	6-32
Eccentricity.....	6-32
In-Rush/Start-Up .....	6-32
Demod .....	6-32
DC Asset.....	6-32
Armature Section Tests .....	6-32
Field Section Tests .....	6-45
Analysis .....	6-49
EMAX Auto .....	6-49
Rotor Evaluation.....	6-49
File Menu.....	6-49
Edit .....	6-50
View .....	6-50
Options .....	6-51
Related Windows.....	6-52
Display Options .....	6-52
Review Spectrum.....	6-53
Review Time Domain.....	6-55
Review Test History.....	6-57
Eccentricity .....	6-58
Review Spectrum.....	6-59
Review Time Domain.....	6-60
Review Test History.....	6-61
In-Rush/Start-Up.....	6-63
File Menu.....	6-63
Edit Menu .....	6-64
Options .....	6-64
Display Options .....	6-65
Review Spectrum.....	6-66
Review Test History.....	6-67
Demod.....	6-68
File Menu.....	6-69
Edit .....	6-70
View .....	6-70
Options .....	6-70
Related Windows.....	6-71
Display Options .....	6-71
Review Spectrum.....	6-73
Review Test History.....	6-73
Analysis .....	6-75
DC Assets .....	6-75
Armature Section.....	6-76
Review Spectrum.....	6-80
Review Time Domain.....	6-80
Field Section.....	6-89
Warning Settings.....	6-89
Change Warning Settings .....	6-91

**EMAX POWER ANALYSIS**

Testing Quick Start .....	7-1
View Data .....	7-1
Introduction.....	7-2
Getting Started .....	7-2
Test Selection Window .....	7-3
Test List .....	7-4
Asset Information .....	7-4
Test Setup .....	7-5
AC Assets .....	7-5
DC Assets .....	7-8
Test Window .....	7-10
AC Induction Assets .....	7-10
Step-by-Step Power .....	7-10
AC Synchronous Assets .....	7-12
AC Wound Rotor Assets .....	7-12
DC Assets .....	7-12
Armature Section.....	7-12
Field Section.....	7-14
Analysis .....	7-14
AC Assets .....	7-14
Power Phasor .....	7-14
Power Time Domain.....	7-18
Power Voltage and Current FFT .....	7-20
Power Voltage and Current Harmonics.....	7-22
Power Instantaneous.....	7-23
Power FFT .....	7-25
Power Harmonics .....	7-27
Power Results .....	7-28
Review Test History .....	7-32
DC Assets .....	7-34
Power .....	7-34
Review the Test History .....	7-37
Warning Settings .....	7-38
Change Warning Settings .....	7-39
<b>APPENDIX A - RESOURCES</b>	
General Information.....	A-1
Wound Rotor & Synchronous Motors .....	A-1
Harmonics .....	A-1
<b>APPENDIX B - ASSET SCHEDULER</b>	
Description.....	B-1
Procedure .....	B-1
Create Schedule .....	B-1
View Scheduled Jobs.....	B-4
View Menu .....	B-5
Schedule Menu .....	B-7
<b>APPENDIX C - ENERGY COST ANALYSIS</b>	
Description.....	C-1
Procedure .....	C-1
Perform Energy Cost Analysis .....	C-1
Asset Information Tab .....	C-2
Replacement Asset Tab .....	C-2
Energy/Operating Hours Tab .....	C-4
Energy Cost Analysis Tab .....	C-5

**GLOSSARY**

**INDEX**