
August 10, 2009

MCEGold® Message Center

The Message Center in MCEGold contains many different types of messages. These messages can be accessed through a set of icons in the left column of the window. The messages found in Asset Condition and Asset Warning Levels are automatically generated by the software to inform you that a change has been made and what the change was. For example, changing an asset condition from Observe to Caution generates a message stating that fact.

You can also enter messages into the Message Center. This is accomplished using the Compose icon. These messages are stored in Asset Diagnostic. Use the Asset Diagnostic icon to view them. If your system has the Scheduler Module, a Schedules icon is also present. This allows you to see and update any scheduled tasks associated with one or all of the assets.

Depending on the configuration, user rights, and options included in your system, the Message Center will default to different message windows. Therefore, always remember to select from the left column the type of message you wish to view.

You are invited to submit an Electric Motor Testing Tip of your own and receive a free PdMA mug or hat if we publish it! Contact Lou at 813-621-6463 ext. 126 or lou@pdma.com.