




# PdMA<sub>EYE</sub>

The Leader in Electric Motor Testing

***PdMA's answer to helping you keep an extra <sub>EYE</sub> on your electric motors***

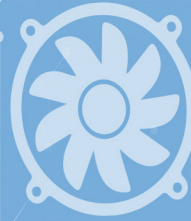

Call (813) 621-6463 or visit [pdma.com](http://pdma.com) for more information



The Leader in Electric Motor Testing

PdMA Corporation is “The Leader In Electric Motor Testing” with over 20 years experience developing the best portable technology to assist you in maintaining a successful motor reliability program. Now we are advancing the motor testing world even further by announcing the release of the PdMA<sub>EYE</sub> permanently installed technology for motor testing—a 24-hour system that provides vital information while the motor runs.

## PdMA<sub>EYE</sub>: Permanently Installed Electric Motor Testing Technology

The PdMA<sub>EYE</sub> test equipment offers the most versatile approach to troubleshooting and trending energized electric motors on the market today.

### 24/7 Surveillance Monitoring

With the PdMA<sub>EYE</sub> watching your motors 24 hours every day you can focus your limited resources and attention on other priorities.

### Critical Asset Alerts

Powered by PdMA’s MCEGold® software, you will be warned of changes in the condition of your critical motor. Immediately following an event you will be notified, prompting you to sign on to the MCEGold analysis software to confirm the condition. Red or yellow color-coded alarms identify any test data that is outside the acceptance criteria.



### Additional Features:



#### Continuous Monitoring

Surveillance monitoring of Power Quality, Power Circuit, Stator, Rotor, and Air Gap.



#### Multi Test Functions

Tests low, medium, and high voltage AC and DC motors. Tests Variable Frequency Drives.



#### Communication

Provides automated restful API messages to a variety of programs to ensure maximum reliability and uptime for your critical assets.



#### Simultaneous Acquisition

12 Channel simultaneous acquisition.



#### Simple Setup

No field calibration required.



#### Data Checking

Sophisticated event logic helps prevent false alarms through built in fault zone analysis.



#### Restart Capable

Auto restart from loss of power (bootstrap).




#### Safe

Tested to IEC 61010 safety standards.

# PdMA<sub>EYE</sub>

Keeping you connected to your electric motor information

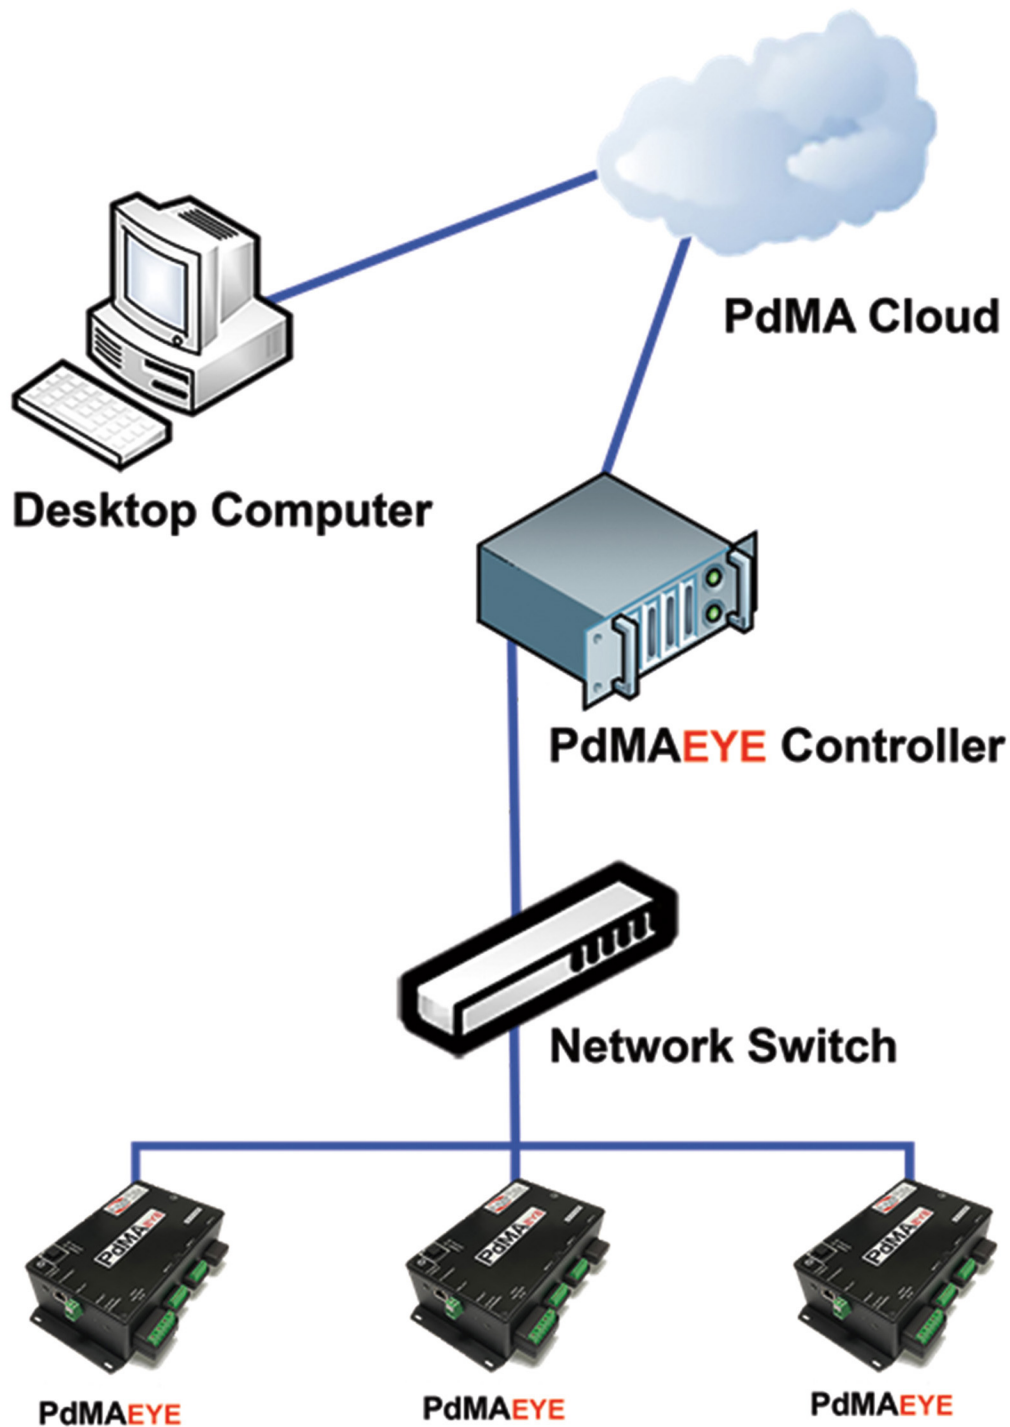

The Leader in Electric Motor Testing

PdMA Corporation  
Corporate Office  
5909-C Hampton Oaks Parkway  
Tampa, Florida 33610

Phone: (813) 621-6463  
Toll-free: (800) 476-6463  
Fax: (813) 620-0206  
Email: [pdma@pdma.com](mailto:pdma@pdma.com)

